


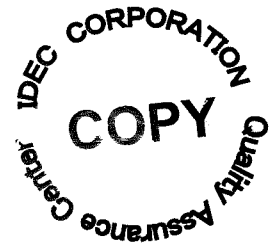

NKCR.E68961 - Auxiliary Devices

Auxiliary Devices



See General Information for Auxiliary Devices

IDEC CORP

6-64 NISHIMIYAHARA 2-CHOME
YODOGAWA-KU, OSAKA 532-0004 JAPAN

E68961

Trademark and/or Tradename: **idec** **iDEC** **IZUMI** **idec** **IDEC** **IDEC**

IDEC**Investigated to ANSI/UL 508**

AS-interface fail-safe monitors Model(s) SX5A-MBR01, SX5A-MBR02, SX5A-MBR03, SX5A-MBR04

AS-interfaces Model(s) FL1B-CAS2

Auxiliary Device Open type Contact Blocks Model(s) HW-U followed by 01 or 10, may be followed by R, may be followed by MAU, may be followed by additional suffixes.

Auxiliary Device Open type Direct Adapter for illuminated models Model(s) HW-GA1N

Auxiliary Device Open type Dummy contact block Model(s) HW-DB

Auxiliary Devices Model(s) HR5S-C2, followed by B, D-T025, D-T050, D-T100, D-T200, D-T400 or S.

HS1T Auxiliary Devices, Complete Assembly, Cat No. HS1T- followed by A, B, C, D, F, G, H, J, DD, VA, VB, VC, VD, VF, VG, VH, VJ, VW, VX, TA, TB, TC, TD, TF, TG, TH, TJ, XA, XB, XC, XD, XF, XG, XH or XJ, followed by 4 or 7Y, maybe followed by 0, 4 or 8, maybe followed by Z, maybe followed by L, followed by M, G, P, SM, SG, SP, maybe followed by any letter, maybe followed by 1, 2 or 3, maybe followed by additional suffixes. Auxiliary Devices, Switches without Cover, Cat No. HS1T- followed by A, B, C, D, F, G, H, J, DD, VA, VB, VC, VD, VF, VG, VH, VJ, VW, VX, TA, TB, TC, TD, TF, TG, TH, TJ, XA, XB, XC, XD, XF, XG, XH or XJ, followed by 4 or 7Y, maybe followed by 0, 4 or 8, maybe followed by Z, maybe followed by L, maybe followed by any letter, maybe followed by 1, 2 or 3, maybe followed by additional suffixes.

HW-DP, HW-PAQ2, HW-PAQ3, HW-PAQ4

Auxiliary devices, Complete Assembly Model(s) Complete Assembly HS5L- followed by A, B, C, D, F, G, H, J, DD, VA, VB, VC, VD, VF, VG, VH, VJ, VW, VX, TA, TB, TC, TD, TF, TG, TH, TJ, XA, XB, XC, XD, XF, XG, XH or XJ, followed by 4 or 7Y, maybe followed by 0 or 4, maybe followed by L, maybe followed by 01 to 99, followed by M, SM, SG, SP, SR or SL, maybe followed by any letter, maybe followed by 1, 2 or 3, maybe followed by additional suffixes.

Switches without Cover, HS5L- followed by A, B, C, D, F, G, H, J, DD, VA, VB, VC, VD, VF, VG, VH, VJ, VW, VX, TA, TB, TC, TD, TF, TG, TH, TJ, XA, XB, XC, XD, XF, XG, XH or XJ, followed by 4 or 7Y, maybe followed by 0 or 4, maybe followed by L, maybe followed by 01 to 99, maybe followed by any letter, maybe followed by 1, 2 or 3, maybe followed by additional suffixes.

Auxiliary Device: Open type Pilot Lights Model(s) AP22M followed by 2 or 2T, followed by Q, followed by 3, 4, H, H2, M, M3 or M4, may be followed by any letters and/or numbers

Cam switches Model(s) ACSNK+, ACSNO+, UCSQM+, UCSQO+

Contact Blocks, "YW/FW/CW Series" Model(s) CW-E01 followed by 1 or 4, followed by B, maybe followed by M, A or V, followed by 1, 2, 4 or F2, followed by E, maybe followed 1, 2, 3, 4, 5 or 6, maybe followed 1, 2, 3, 4, 5 or 6, followed by 1 or 2 letters.

CW-E10 followed by 1 or 4, followed by B, maybe followed by M, A or V, followed by 1, 2, 4 or F2, followed by E, maybe followed 1, 2, 3, 4, 5 or 6, maybe followed 1, 2, 3, 4, 5 or 6, followed by 1 or 2 letters.

YW, EW20 followed by 1 or 4, followed by B, maybe followed by M, A or V, followed by 1, 2, 4 or F2, followed by E, maybe followed 1, 2, 3, 4, 5 or 6, maybe followed 1, 2, 3, 4, 5 or 6, followed by 1 or 2 letters.

LH1D, followed by D2 or H2 may be followed by Z, M or N, followed by L, P or H, followed by Q4, followed by C05, C10, C20, C30 or C50, followed by R, A, W, Y, G, S, PW or ##, may be followed by W.+

LED Lamp Model(s) LSRD-1, LSRD-2, LSRD-6, LSRD-H2, LSRD-M2, LSRD-M4

Locking switches, enclosed type Model(s) HS6E followed by A, B, C, D, L, M, N, P, DD, DM, DP, VA, VB, VC, VD, VL, VM, VN or VP, followed by 4 or 7Y, may be followed by 0 or 4, may be followed by B or R, maybe followed by 01 thru 99, maybe followed by R, G, A or Y.+

Mono-lever operators, for use with contact block BR Model(s) ARN may be followed by S or L, followed by 1, 2, 3 or 4, may be followed by numbers and/or letters.

Mono-Lever Switch Model(s) HW, followed by 1 or 4 followed M, followed by any suffixes. followed by 1 or 4, followed by B, followed by V or X, followed by 3, 4 or 5, may be followed by F or C or P, followed by 01, 11, 02, 21, 12, 03, 31, 22, 13 or 04, may be followed by N1, N2, N3, N4, N5, N6, N7, N8 or N9, followed by R, R-EMO, R-EMO-2, or Y, may be followed by MAU, followed by any suffixes. followed by 1 or 4, followed by B, followed by Y, followed by 2, may be followed by F or C or P, followed by 01, 11 or 02, may be followed by N1, N2, N3, N4, N5, N6, N7, N8 or N9, followed by R or Y, may be followed by MAU, followed by any suffixes.

HW-CN may be followed by P, followed by 10, 01, 11, 20, 21, 22, 02, 30, 12, 03, 40, 31, 13, 04, 50, 41, 32, 23, 14, 05, 60, 51, 42, 33, 24, 15, 06, 1S, 2S, 5S, 6S, 7S, 8S, 9S or other alphanumeric characters, may be followed by *****.

N /TWN Series (panel cutout dimensions-30mm diam) illuminated push button switches Model(s) AOLNE

N/TWN Series (panel cutout dimensions-30mm diam) illuminated push button switches Model(s) ABLN, ALLN, ALN, ALNE, AOLN, ULQN, UOLQN

N/TWN Series (panel cutout dimensions-30mm diam) pilot lights Model(s) APNG, APNGE, UPQN, UPQNE

N/TWN Series (panel cutout dimensions-30mm diam) push button switches Model(s) AB, AO, AT, UB, UO, UT, UW or ABB may be followed by Q, followed by N.

N/TWN Series (panel cutout dimensions-30mm diam) selector push button switches Model(s) ABN may be followed by 6, 7 or 9, may be followed by L.

N/TWN Series (panel cutout dimensions-30mm diam) selector switches Model(s) ASN, ASTN

Pilot light units Model(s) HW may be followed by 1 or 2, may be followed by P, may be followed by 1 or 2, followed by J, may be followed by P, followed by Q, RH or CM, may be followed by 0, 2, 3 or 4, H2, M2 or M4, may be followed by one to three letters, may be followed by additional letter(s) and/or number(s), including hyphens

Pilot Light with or without Transformer Model(s) Type HW?P, HW1P-5Q4, HW1P-5Q7.

Pilot Light, complete devices, "YW/FW SERIES" Model(s) FW F/B By 1 or 4 followed by P maybe be followed by 1, 1B, 2, 2T, or 2TB maybe followed by E or U followed by Q, H, M, H2 or M2 followed by 0, 2, 3, 4, 5, 6, 7, H, H2, M, M3, or M4 maybe followed by additional numbers and of letters.

YW F/B By 1 or 4 followed by P maybe be followed by 1, 1B, 2, 2T, or 2TB maybe followed by E or U followed by Q, H, M, H2 or M2 followed by 0, 2, 3, 4, 5, 6, 7, H, H2, M, M3, or M4 maybe followed by additional numbers and of letters.

Pilot lights (panel cutout dimensions-30mm diam), "N/TWN Series" Model(s) APN, APNE

Proximity switches Model(s) HS7A-DMC50010, HS7A-DMC5002, HS7A-DMC5005, HS7A-DMC50110, HS7A-DMC5012, HS7A-DMC5015, HS7A-DMC59010, HS7A-DMC5902, HS7A-DMC5905, HS7A-DMC59110, HS7A-DMC5912, HS7A-DMC5915, HS7A-DMC70010, HS7A-DMC7002, HS7A-DMC7005, HS7A-DMC70110, HS7A-DMC7012, HS7A-DMC7015, HS7A-DMC79010, HS7A-DMC7902, HS7A-DMC7905, HS7A-DMC79110, HS7A-DMC7912, HS7A-DMC7915, HS7A-DMP50010, HS7A-DMP5002, HS7A-DMP5005, HS7A-DMP50110, HS7A-DMP5012, HS7A-DMP5015, HS7A-DMP59010, HS7A-DMP5902, HS7A-DMP5905, HS7A-DMP59110, HS7A-DMP5912, HS7A-DMP5915, HS7A-DMP70010, HS7A-DMP7002, HS7A-DMP7005, HS7A-DMP70110, HS7A-DMP7012, HS7A-DMP7015, HS7A-DMP79010, HS7A-DMP7902, HS7A-DMP7905, HS7A-DMP79110, HS7A-DMP7912, HS7A-DMP7915

Push button switches Model(s) XN, followed by 4, followed by S, may be followed by B, L or T, followed by L, followed by 4, followed by 0 thru 3, followed by 1 thru 4, may be followed by Q1 thru Q4, followed by M or Mf, followed by R, RH, N, Y, B, G, W or S.

XW1E or XA1E, followed by -BV, -LV or -TV followed by 3 or 4, followed by 0 thru 3, followed by 1 thru 4, may be followed by Q4, Q3, Q2 or Q1, may be followed by V, followed by R, N, Y, B, G, W or S.

Push buttons, "XN Series" Model(s) Model XN followed by 1, 4, or 5, followed by E, followed by B, L, or T, followed by V, L, or D, followed by 4, or 5, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M, or MF, followed by R, R-EMO, RH, RH-EMO, N, Y, B, G, W, or S, may be followed by optional letters and/or numbers that may employ hyphens

XN Series Model XN, followed by 1, 4, or 5, followed by E, followed by B, L, or T, followed by V, L, or D, followed by 4, or 5, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M, or MF, followed by R, R-EMO, RH, RH-EMO, N, Y, B, G, W, or S, may be followed by optional letters and/or numbers

Push buttons, "XW Series" Model(s) Model XW1E followed by BV, LV, or TV, followed by 3, 4, 5, or 4T, may be followed by G, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M, or MF, followed by R, R-EMO, RH, RH-EMO, N, Y, B, G, W, or S, may be followed by optional letters and/or numbers that may employ hyphens

Push buttons Model(s) Contact Unit Model XW-C may be followed by T, followed by 0, 1, or 2 or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3 or Q4, followed by M or MF, may be followed by R, may be followed by optional letters and/or numbers that may employ hyphens

XN Series, Model XN, followed by 1, 4, or 5, followed by E, followed by B, L, or T, followed by V, L, or D, followed by 4, or 5, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M, or MF, followed by R, R-EMO, RH, RH-EMO, N, Y, B, G, W, or S, may be followed by optional letters and/or numbers

XW Series, Model XW1E, followed by BV, LV, or TV, followed by 3, 4, 5, or 4T, may be followed by G, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M, or MF, followed by R, R-EMO, RH, RH-EMO, N, Y, B, G, W, or S, may be followed by optional letters and/or numbers

Pushbutton switch or Illuminated Pushbutton Switch Model(s) HW, followed by 1, 2, 3 or 4 followed by B or L, followed by any suffixes.

Pushbutton Switches Model(s) AYN, AZN

Pushbutton Switches, Illuminated Pushbutton Switches, complete devices, "YW/FW SERIES" Model(s) FW followed by 1 or 4, followed by B or L, followed by M, A or V, followed by 1, 2, 4 or F2, followed by E, followed by 0, 1, 2, 3, 4, 5 or 6, followed by 0, 1, 2, 3, 4, 5 or 6, maybe followed by Q, maybe followed by 0, 2, 3, 4, 5,6, 7 H, H2, M, M3 or M4 maybe followed by additional numbers and or letters.

YW followed by 1 or 4, followed by B or L, followed by M, A or V, followed by 1, 2, 4 or F2, followed by E, followed by 0, 1, 2, 3, 4, 5 or 6, followed by 0, 1, 2, 3, 4, 5 or 6, maybe followed by Q, maybe followed by 0, 2, 3, 4, 5,6, 7 H, H2, M, M3 or M4 maybe followed by additional numbers and or letters.

S Series (panel cutout dimensions-25mm diam) illuminated push button switches Model(s) ABL5, ALL5

S Series (panel cutout dimensions-25mm diam) pilot lights Model(s) APS, UPQS

S Series (panel cutout dimensions-25mm diam) push button switches Model(s) ABBS, ATS, UTS

Safety modules, "Preventa Series" Model(s) HR1S-AC5121, HR1S-AC5121P

Safety relays, "Preventa Series" Model(s) HR1S-AF followed by a four digit number, may be followed by P, may be followed B.

HR1S-AK followed by a six digit number, may be followed by P.

HR1S-AL followed by a four digit number, may be followed by Z, may be followed by T, followed by a three digit number.

HR1S-AM followed by a four digit number, may be followed by Z, may be followed by T, followed by a three digit number.

HR1S-AP followed by a four digit number, may be followed by Z, may be followed by T, followed by a three digit number.

HR1S-AT followed by a four digit number, may be followed by Z, may be followed by T, followed by a three digit number.

HR1S-ATE5110, HR1S-ATE5110P

HR1S-AX followed by a four digit number, may be followed by Z, may be followed by T, followed by a three digit number.

HR1S-DMB followed by a four digit number, may be followed by P.

HR1S-DME followed by a four digit number, may be followed by P.

HR1S-ECM followed by a four digit number, may be followed by Z, may be followed by T, followed by a three digit number.

Safety switches Model(s) HS1B+, HS1C+, HS1C-P+, HS1E+, HS1L+, HS1P+, HS2B+, HS2P-1M+, HS5B+, HS5D+, HS6B-02, HS6B-03, HS6B-11, HS6B-12

Select or Switch, Key Selector Switch, complete devices, "YW/FW SERIES" Model(s) FW followed By 1 or 4 followed by S or K, followed by 2, 3, 21, 31, 32, or 33 followed by A, B, C, D, E, G, H, or Blank followed by E, followed by 0, 1, 2, 3, 4, 5 or 6, followed by 0, 1, 2, 3, 4, 5 or 6 maybe followed by additional numbers and or letters.

YW followed By 1 or 4 followed by S or K, followed by 2, 3, 21, 31, 32, or 33 followed by A, B, C, D, E, G, H, or Blank followed by E, followed by 0, 1, 2, 3, 4, 5 or 6, followed by 0, 1, 2, 3, 4, 5 or 6 maybe followed by additional numbers and or letters.

Selector Pushbutton Switches Model(s) ASBN

Selector Switch Model(s) HW, followed by 1, 3 or 4 followed by S, K or R, followed by any suffixes.

Slave units Model(s) HW-A, LA-A, T-Branch (LA9Z)

Transformers for pilot duty, for use with operator units and lamps, "HW Series" Model(s) HW-F, HW-M, HW-R

TW Series alternate designations, contact blocks Model(s) HW-C01-MAU, HW-C01R, HW-C01R-MAU, HW-C10-MAU, HW-C10R, HW-C10R-MAU, HW-F01-MAU, HW-F01R-MAU, HW-F10-MAU, HW-F10R-MAU, HW-G01-MAU, HW-G01R-MAU, HW-G10-MAU, HW-G10R-MAU, HW-U01, HW-U01-MAU, HW-U01R, HW-U01R-MAU, HW-U10, HW-U10-MAU, HW-U10R, HW-U10R-MAU, TW-C01L, TW-C01M, TW-C01R, TW-C01T, TW-C10L, TW-C10M, TW-C10R, TW-C10T, TW-F01L, TW-F01M, TW-F01R, TW-F01T, TW-F10L, TW-F10M, TW-F10R, TW-F10T

TW Series alternate designations, Direct Adapter Model(s) HW-GA1N

TW Series alternate designations, direct adapters Model(s) HW-DA1, HW-DA1F, HW-GA1, TW-DA1, TW-DA1F

- Where ## stands for two-color alternate. (e.g. RG-red/green color alternate) ### represents for three-color alternate then.

* - Where * stands for alternate model.

+ - Followed by additional numbers and letters.

Last Updated on 2020-06-22

このデータベースに企業名や製品が掲載されている場合でも、掲載された製品がULのフォローアップサービスに基づいて製造されたことを保証するものではありません。ULの認証並びにフォローアップサービスによる確認を受けているとみなされるのは、ULマークが表示された製品のみです。常に製品にULマークが表示されているかご確認ください。

オンライン認証製品ディレクトリーに掲載される資料の転載は、以下の条件を満たす場合にのみ認められます。1.ガイド・インフォメーション（製品カテゴリーガイド）、アセンブリ、構造、設計、システム、および/または認証に関する情報（ファイル）が、誤解を招かない方法で、データや図面の変更を一切行うことなく、そのまま掲載されていること。2.転載された資料に隣接して、「Reprinted from the Online Certifications Directory with permission from UL」（ULの許可を得た上で、オンライン認証製品ディレクトリーから転載）」と記載すること。転載する資料には、著作権に関して次の形式で記載すること。"© 2020 UL LLC"

NISD.E305148 - Emergency Stop Devices

Emergency Stop Devices

See General Information for Emergency Stop Devices

IDEC CORP

6-64 NISHIMIYAHARA 2-CHOME
YODOGAWA-KU, OSAKA 532-0004 JAPAN

E305148

Emergency Stop Devices, Model(s) Final Product for Push-Pull Switch - Type HW followed by 1 or 4, followed by B, followed by Y, followed by 2, may be followed by F or C or P, may be followed by N, followed by 01, 11 or 02, may be followed by N1, N2, N3, N4, N5, N6, N7, N8 or N9, followed by R, may be followed by MAU, followed by any suffixes.

Emergency Stop Devices, Model(s) Final Product for Pushlock Turn Reset or Pushlock Key Reset Switch - Type HW, followed by 1 or 4, followed by B, followed by V or X, followed by 3, 4 or 5, may be followed by F or C or P, may be followed by N, followed by 01, 11, 02, 21, 12, 03, 31, 22, 13 or 04, may be followed by N1, N2, N3, N4, N5, N6, N7, N8 or N9, followed by R, R-EMO, or R-EMO-2, may be followed by MAU, followed by any suffixes.

Emergency Stop Devices, Model(s) Operator Unit for Push-Pull Switch - Type HW, followed by 1 or 4, followed by B, followed by Y, followed by 2, followed by R, followed by any suffixes.

Emergency Stop Devices, Model(s) Operator Unit for PushLock Turn Reset or Pushlock Key Reset Switch - Type HW, followed by 1 or 4, followed by B, followed by V or X, followed by 3, 4 or 5, followed by R, R-EMO, or R-EMO-2, followed by any suffixes.

Emergency stop pushbuttons, Model(s) XN Series

Emergency stop switches, Model(s) Contact Unit Model XW-C, may be followed by T, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3 or Q4, followed by M or MF, may be followed by R, may be followed by optional alphanumeric characters that may have hyphens.

Emergency stop switches, Model(s) XW1E, followed by BV, LV, or TV, followed by 3, 4, 5, or 4T, may be followed by G, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M or MF, followed by R, or RH, may be followed by optional alphanumeric characters that may have hyphens.

Emergency stop switches, Model(s) YW, followed by 1, followed by L Series

Last Updated on 2019-08-01

このデータベースに企業名や製品が掲載されている場合でも、掲載された製品がULのフォローアップサービスに基づいて製造されたことを保証するものではありません。ULの認証並びにフォローアップサービスによる確認を受けているとみなされるのは、ULマークが表示された製品のみです。常に製品にULマークが表示されているかご確認ください。

オンライン認証製品ディレクトリーに掲載される資料の転載は、以下の条件を満たす場合にのみ認められます。1.ガイド・インフォメーション（製品カテゴリーガイド）、アセンブリ、構造、設計、システム、および/または認証に関する情報（ファイル）が、誤解を招かない方法で、データや図面の変更を一切行うことなく、そのまま掲載されていること。2.転載された資料に隣接して、「Reprinted from the Online Certifications Directory with permission from UL」（ULの許可を得た上で、オンライン認証製品ディレクトリーから転載）」と記載すること。転載する資料には、著作権に関して次の形式で記載すること。"© 2020 UL LLC"